

Gate Opening Systems Pty Ltd

ABN 17 352 554 545

Factory 2 / 11 Leader street, Campbellfield Vic 3061

Phone: (03) 9305 3034

Website: www.gateopeningsystems.com.au Email: gates@gateopeningsystems.com.au

Kustos Manual Override Instructions

Thank you for buying this product, our company is sure that you will be more than satisfied with the product's performance. The product is supplied with a "**Instruction booklet**". This should be read carefully as it provides important information about safety, installation, operation and maintenance. This product complies with the recognised technical standards and safety regulations.

SAFETY

If correctly installed and used, this automation device satisfies the required safety level standards. However, it is advisable to observe some practical rules in order to avoid accidental problems. Before using the automation device, carefully read the operation instructions and keep them for future reference.

• Keep children, persons and things outside the automation working area, particularly during operation.

• Children must be supervised to ensure they do not play with the application.

• This application is not meant for use by people (including children) with impaired mental, physical or sensory capacities, or people who do not have suitable knowledge, unless they are supervised or have been instructed by people who are responsible for their safety.

Keep radio control or other control devices out of children's reach, in order to avoid any unintentional automation activation.
Check the system frequently, especially cables, springs or supports, to detect any loss of balance and signs of wear or damage.

• Do not intentionally oppose the leaf movement.

• Do not attempt to open the gate by hand, if the actuator has not been released by means of the appropriate release knob.

• When cleaning the outside or performing other maintenance work, always cut off mains power.

• Do not modify the automation components.

• Do not use the automated system if it is in need of repair. In the event of a malfunction, cut off the power, activate the emergency release to allow access and call Gate Opening Systems.

• Keep the photocells' optics and illuminating indicator devices clean. Check that no branches or shrubs interfere with the safety devices (photocells).

• For any direct assistance to the automation system, request the assistance of a qualified technician (Gate Opening Systems).

• Have qualified personnel check the automation system once a year.

MANUAL RELEASE

The manual or emergency release is to be activated when a gate must be opened by hand, and in all cases where the automation system fails to operate or operates incorrectly.

To carry out the emergency manoeuvre, proceed as follows: • Turn off power (fig1)

• Lift lock cover and Insert the personalised key into its appropriate seat (fig. 2) and turn it clockwise (180°),

Please Note: If you have a EPB lock on the gate. Insert appropriate key into EPB lock first and turn clockwise before completing step 2.


• Push the leaf manually to open the gate.

Warning: Do not push the gate leaf hard, but rather help it along its entire stroke.

• To reset the motorized operation turn key in the opposite direction (anti-clockwise) and refit the cover.

MAINTENANCE

The maintenance of the system should only be carried out by qualified personnel regularly. Inspect the installation frequently to check that there are no signs of wear or damage to the cables, springs or supports. If any maintenance work is deemed necessary, do not use the operator.

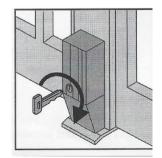

EPB lock

Recommended maintenance to be performed as follows: Operator performing under 20 cycles a day every 12 months, Between 20-49 a day every 6 months Between 50-99 a day every 4 months, Between 100-150 a day every 2 months Over 150 a day monthly