## Gate OPENING SYSTEMS

## **Gate Opening Systems Pty Ltd**

ABN 17 352 554 545

Factory 2 / 11 Leader Street, Campbellfield Vic 3061 **Phone:** (03) 9305 3034

Website: <a href="https://www.gateopeningsystems.com.au">www.gateopeningsystems.com.au</a>

Email: gates@gateopeningsystems.com.au

## **Programming of BFT Mitto Remote Controls Using an Existing Remote**

- 1. Take both existing and new remotes out to gate. You must be near the installation
- 2. Using the existing remote which has already been programmed to the gate. Hold the 2 buttons on front of remote down together for 2 seconds (red light will come on) and release. (Top buttons if more than 2 buttons).
- 3. Then using the same remote, hold the 1 button that opens your gate for 2 seconds, (red light will come on) and release. (Gate should not move)
- 4. Using the new remote, hold the 2 buttons on front of remote down together for 2 seconds (red light will come on) and release. (Top buttons if more than 2 buttons).
- 5. Then using the same new remote hold down the button that you would like to use to open the gate for 2 seconds and release.
- 6. Wait 10 Seconds so that remotes will be released from programming mode.
- 7. New remote should now be programmed.
- 8. Follow these instructions for each gate/roller door you wish to program.

**PLEASE NOTE:** Some older Mitto remotes have a hidden button (a small pin hole on back of remote) which you need to press with a pin instead of the 2 buttons on the front.

Please note if this does not work please contact us and we will organise at the price of a service call for our technician to come and program them.

